





WD1 1000 - *Specification*



Wood Fire Gather with Single flue

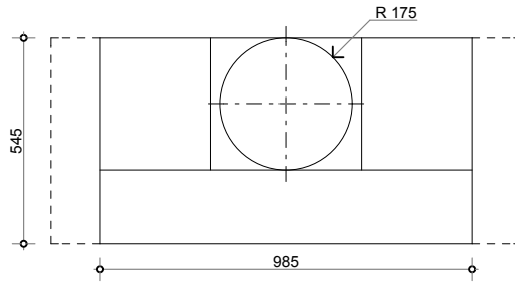



Plan View

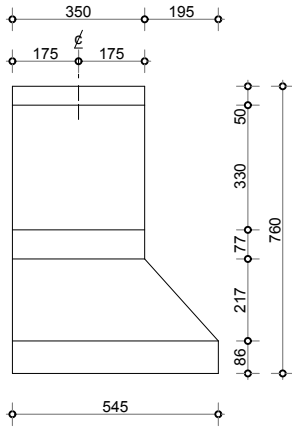


Side Elevation

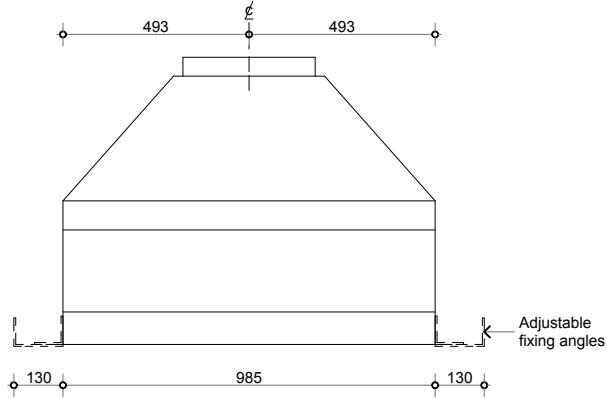


Front Elevation

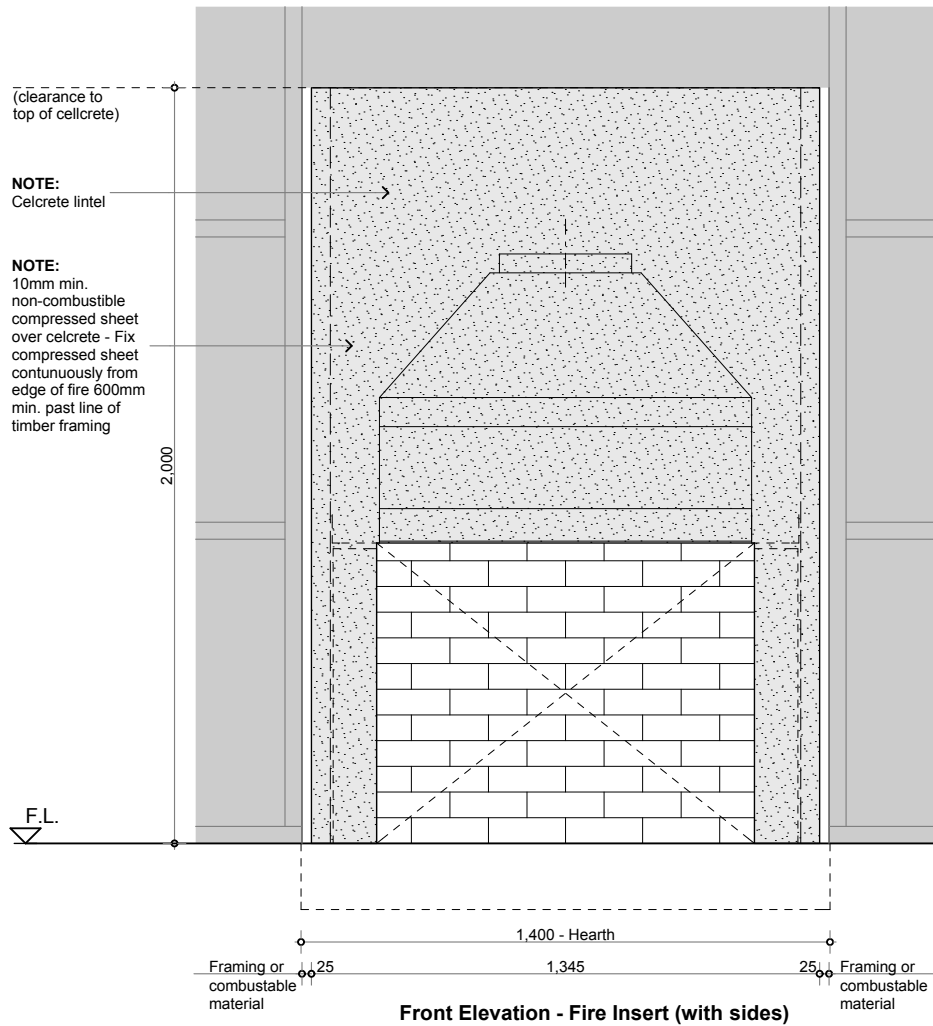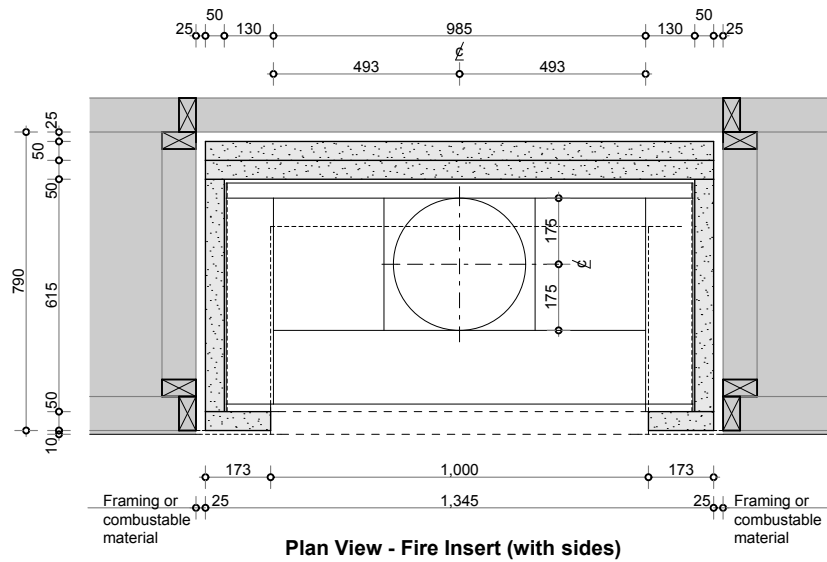

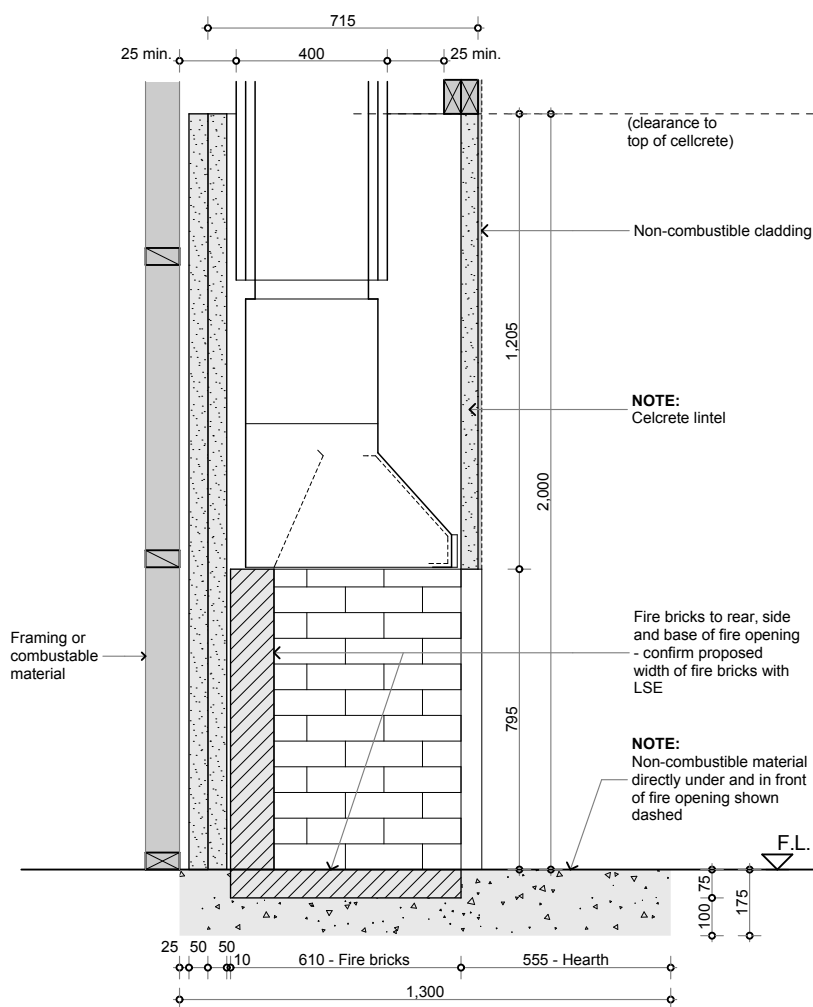

Side Elevation - Fire Insert (with sides)

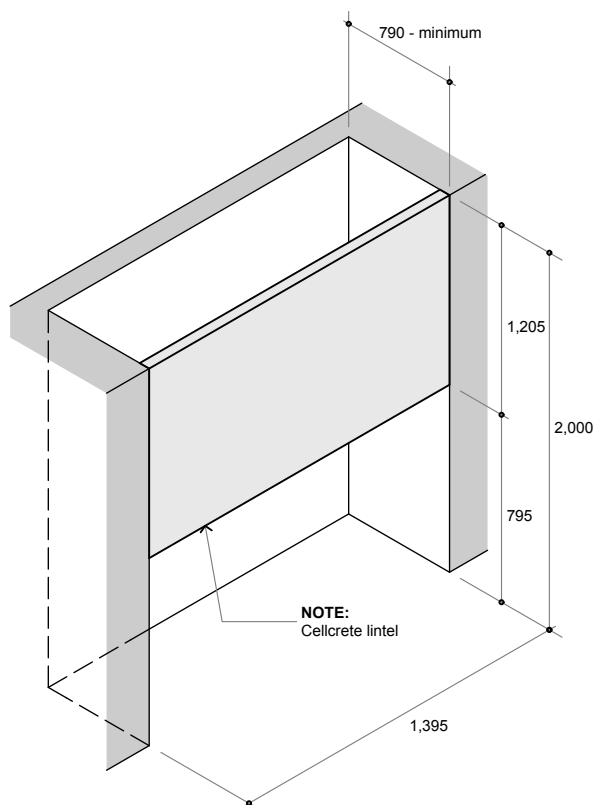

Fire Installation - Trim Sizes (Fire insert with sides)

WD1 1000 - Installation (Fire insert with sides)


Page number **A02.2.4**

Drawn	SER
Revision	A
Creation Date	02/05/06
Plot Date	22/04/2013
ALL DIMENSIONS TO BE VERIFIED ON SITE	


THE FIRE DEPT Contact Details:

Freephone: 0800 888 550
Ph: 07 574 6601
Fax: 07 574 1404
PO Box 10275, Bayfair, Mount Maunganui
www.thefiredept.co.nz or info@thefiredept.co.nz

THE FIRE DEPT.

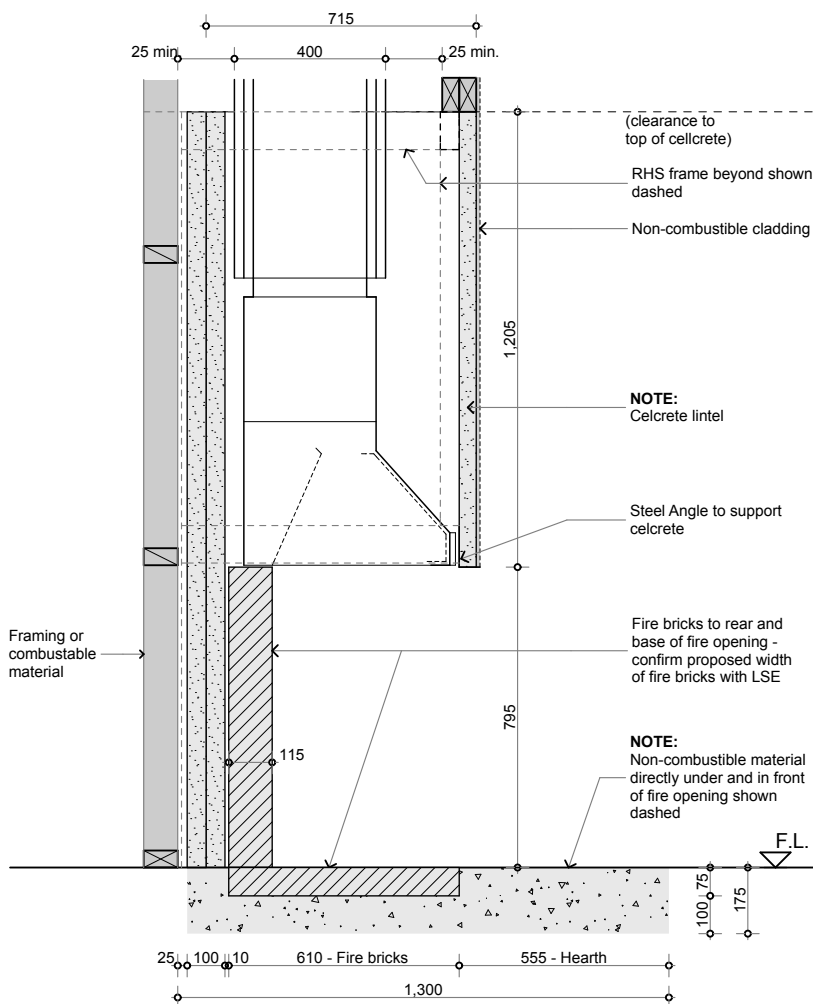

Side Elevation - Fire Insert (open at hearth level)

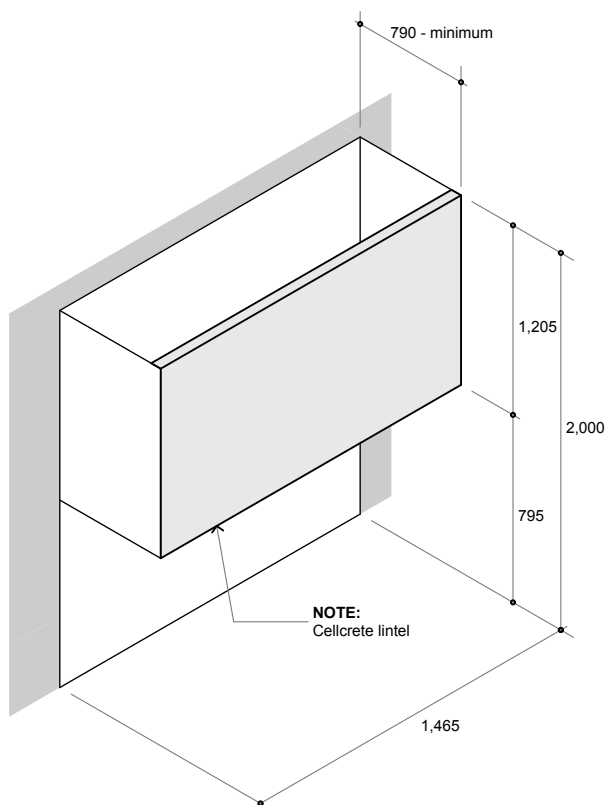

Fire Installation - Overall Sizes
Confirm with LSE prior to specifying

WD1 1000 - Installation (Open at hearth level)

Page number **A02.2.6**



Drawn	SER
Revision	A
Creation Date	02/05/06
Plot Date	22/04/2013
ALL DIMENSIONS TO BE VERIFIED ON SITE	


THE FIRE DEPT Contact Details:

Freephone: 0800 888 550
Ph: 07 574 6601
Fax: 07 574 1404
PO Box 10275, Bayfair, Mount Maunganui


www.thefiredept.co.nz or info@thefiredept.co.nz

THE FIRE DEPT.

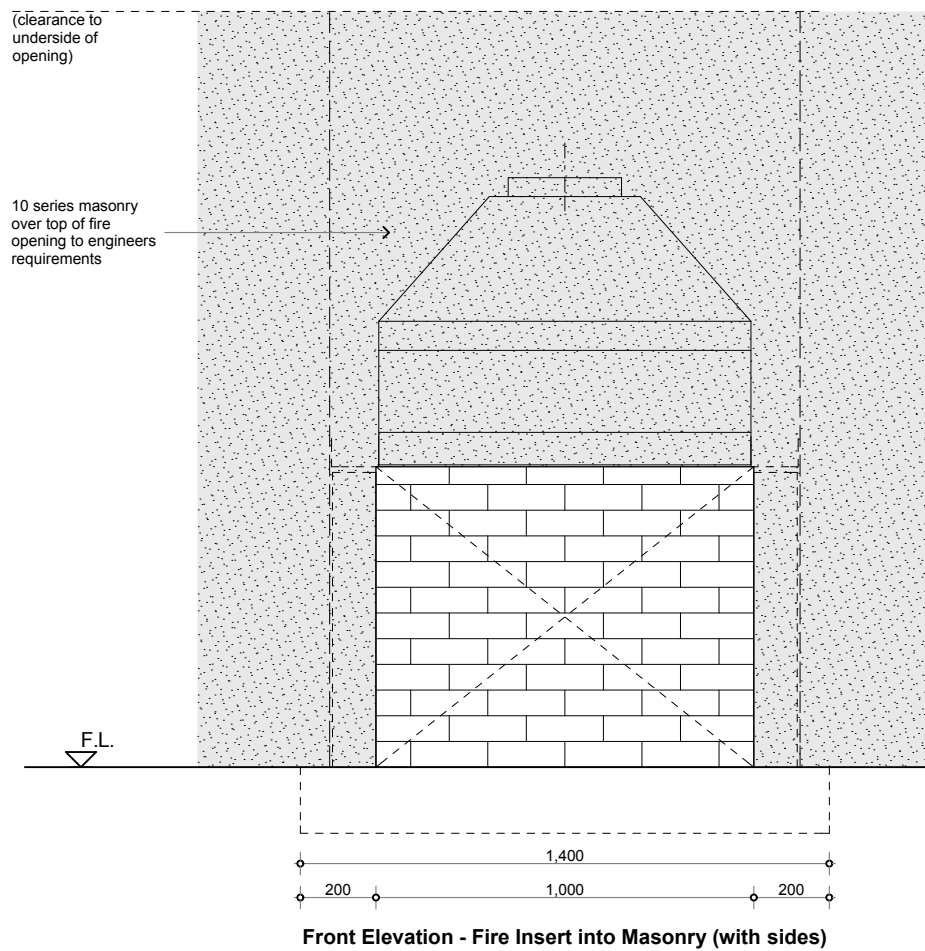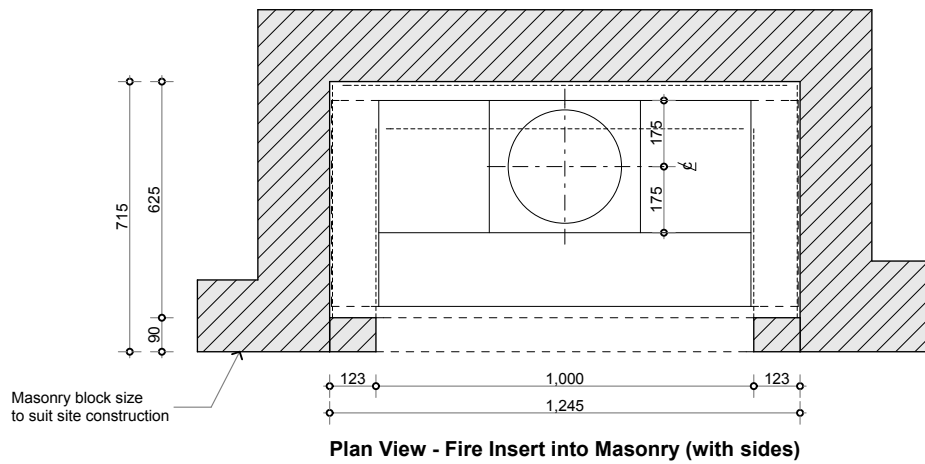


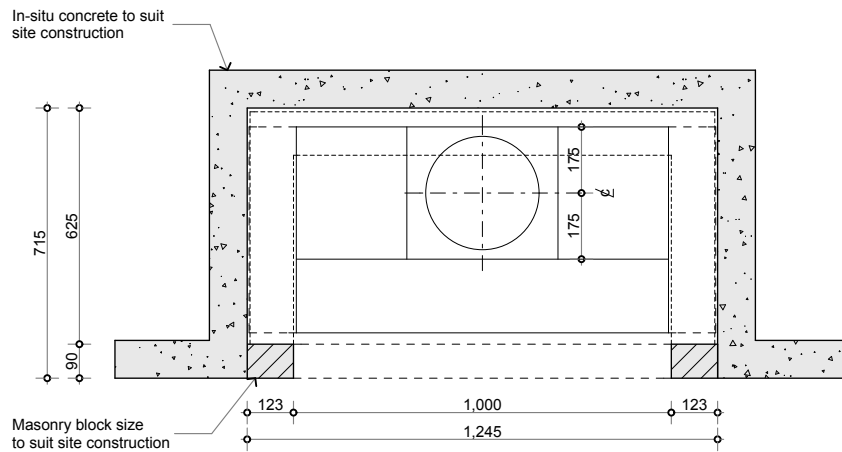


Plan View - Fire Insert into In-situ Concrete (with sides)

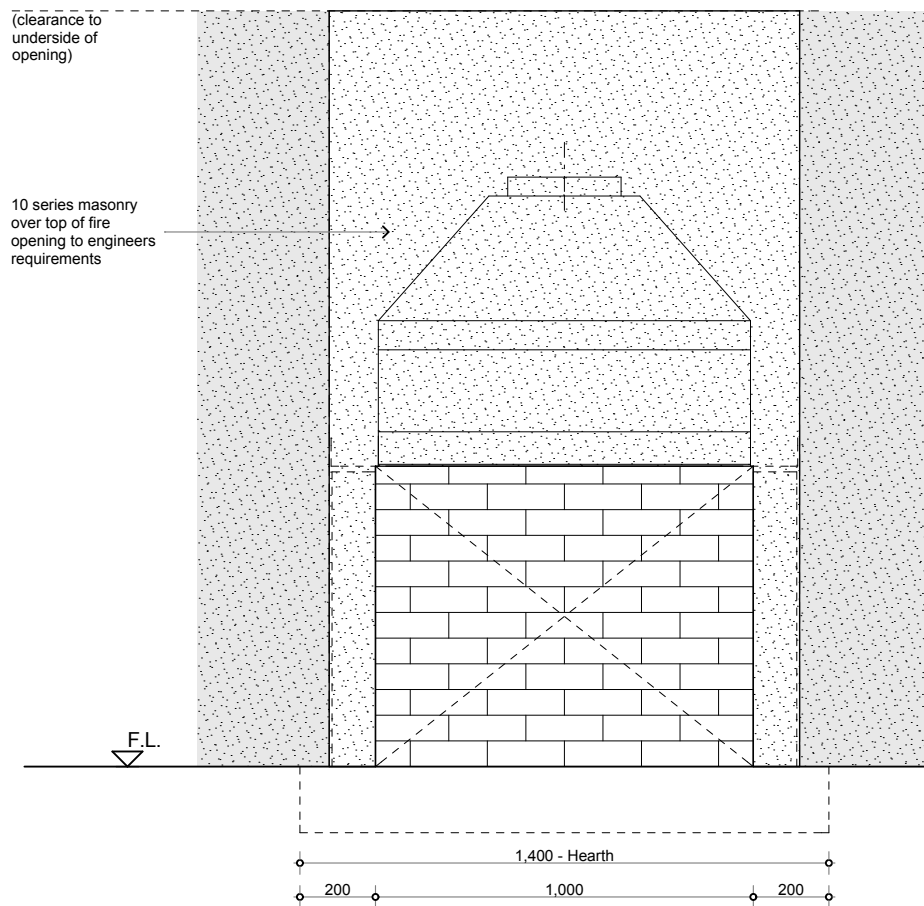


Front Elevation - Fire Insert into In-situ Concrete (with sides)

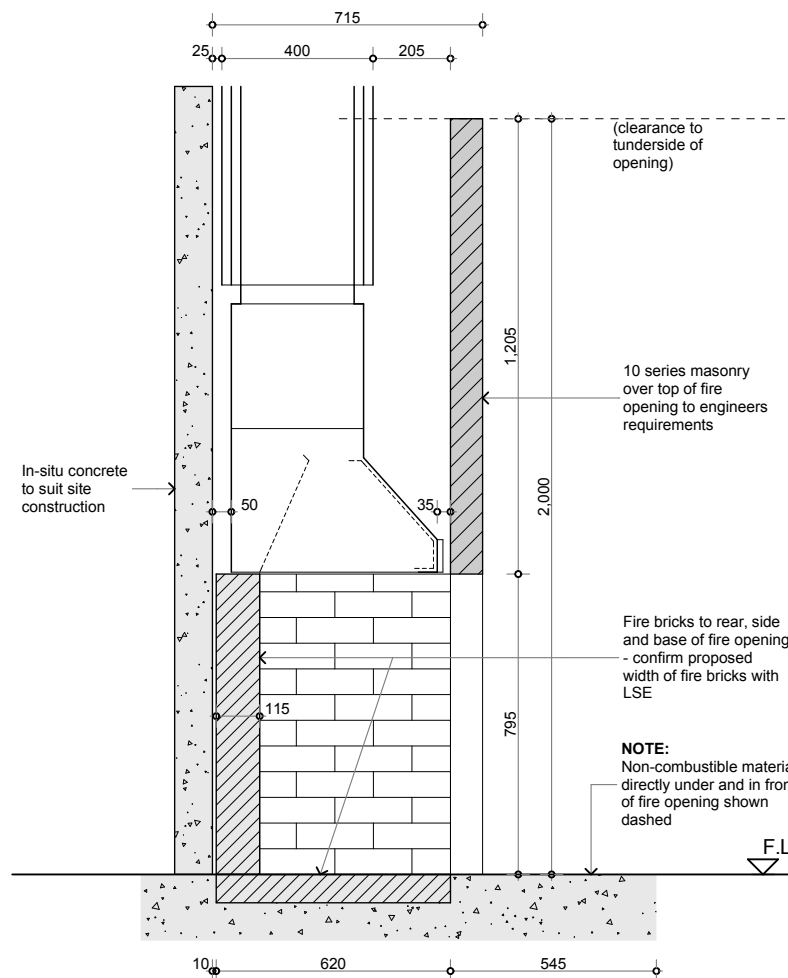

Side Elevation - Fire Insert into In-situ Concrete (with sides)

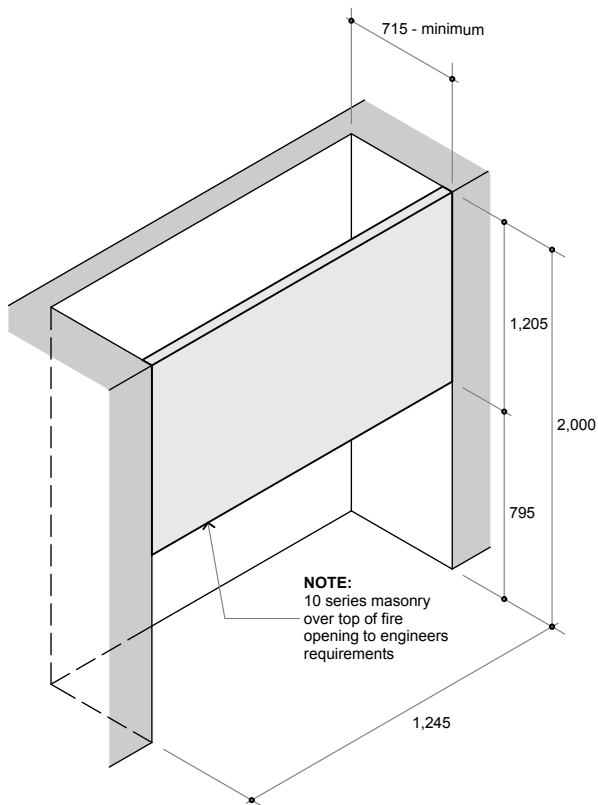

Fire Installation - Trim Sizes (Fire insert with sides)

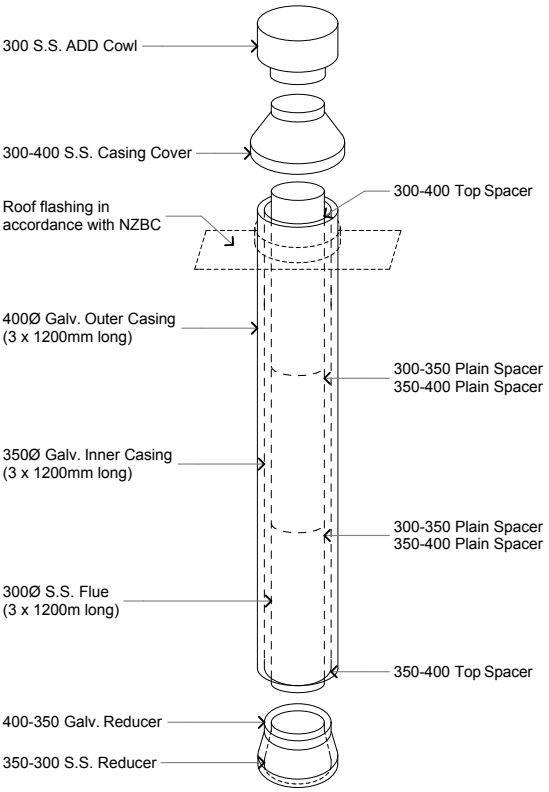

Flue Components:
WD1 800 - 1000 - 1300 - 1500

WD1 1000 - Flue Components

Drawn	SER
Revision	A
Creation Date	02/05/06
Plot Date	22/04/2013
ALL DIMENSIONS TO BE VERIFIED ON SITE	

THE FIRE DEPT Contact Details:

Freephone: 0800 888 550
Ph: 07 574 6601
Fax: 07 574 1404
PO Box 10275, Bayfair, Mount Maunganui

www.thefiredept.co.nz or info@thefiredept.co.nz

